

Montageanleitung: sw-610.100, sw-610.102

Instruction sheet - Notice de montage -
instrukcja użytkowania - installatie-instructies

Eurokastenwagen

Euro container trolley

Chariot porte-bacs norme européenne

Wózek na EURO-skrzynki

Eurobakkenwagen



2x



3x

M8
20mm




12x

M8



12x

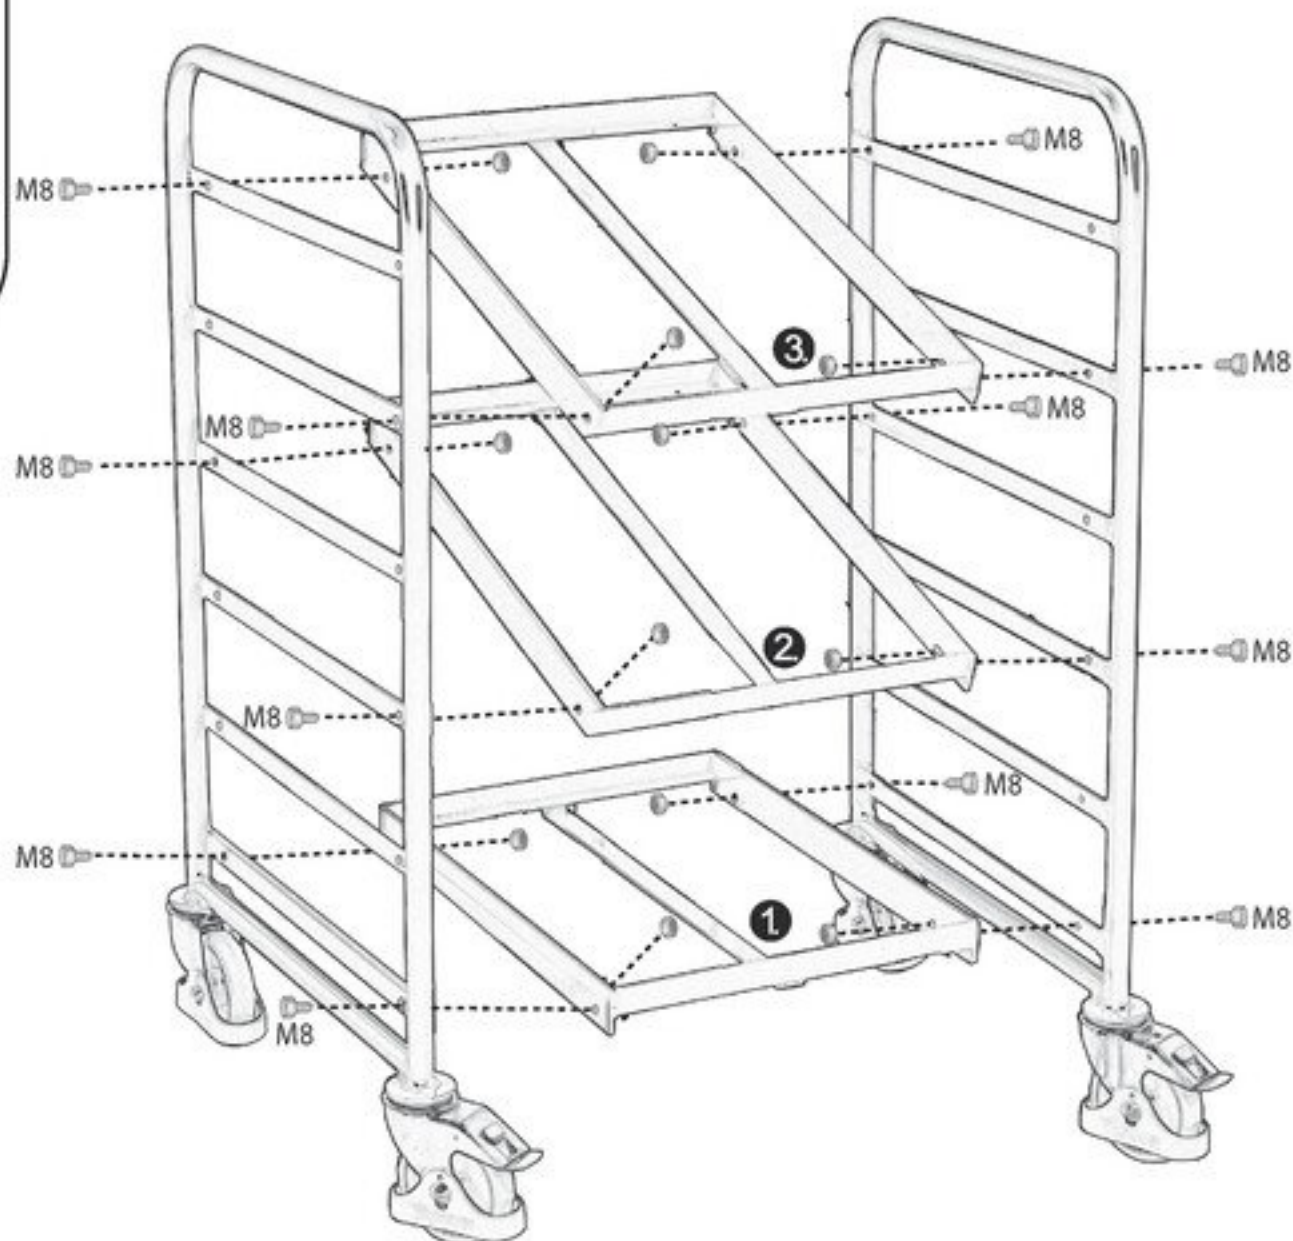

VARIOfit®