

Montageanleitung:

sw-500.105, sw-700.105, sw-700.106

Instruction sheet - Notice de montage -
instrukcja użytkowania - installatie-instructies



1x



1x

M12
25mm



2x



1x



Schiebebügelwagen mit senkrechten Rohren

Push bar trolley with vertical tubes

Chariot à dossier tubulaire avec tubes verticaux

Wózek z pałakiem z pionowymi rurami

Magazijnwagen met verticale buizen

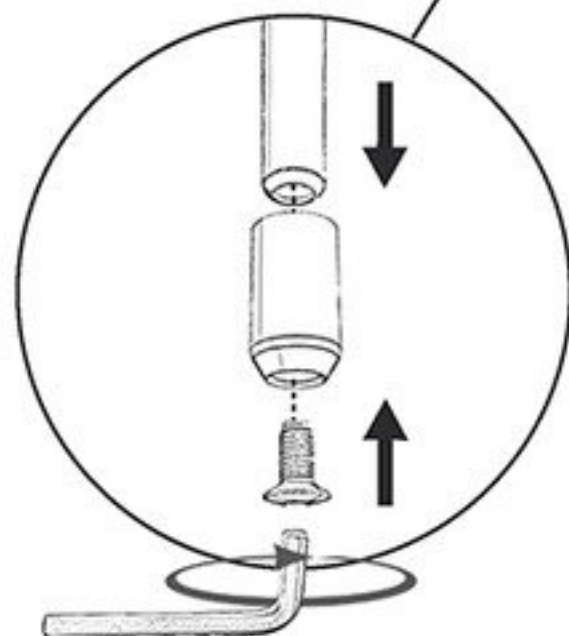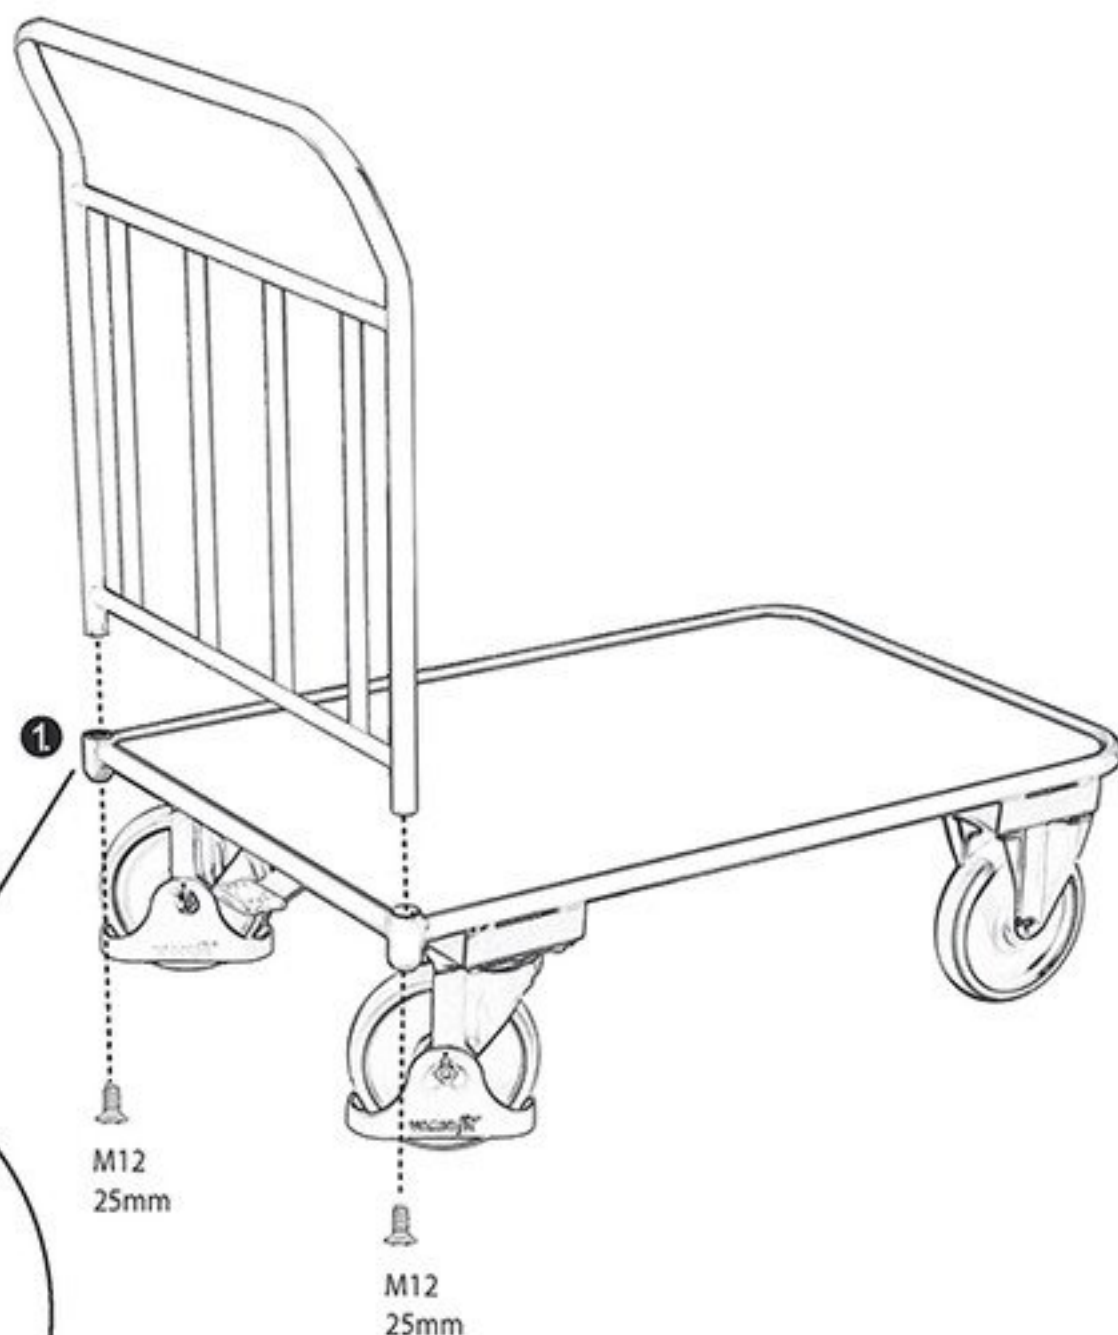

VARIOfit®